



8150

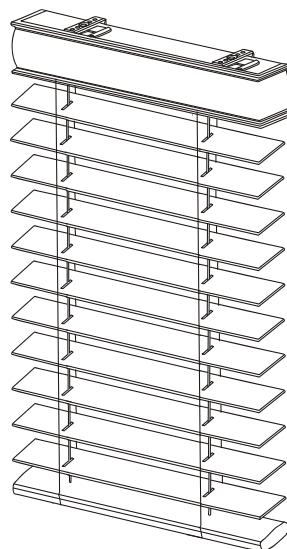

•		
•	2400	.
•	4000	.
•	7	² .



8150

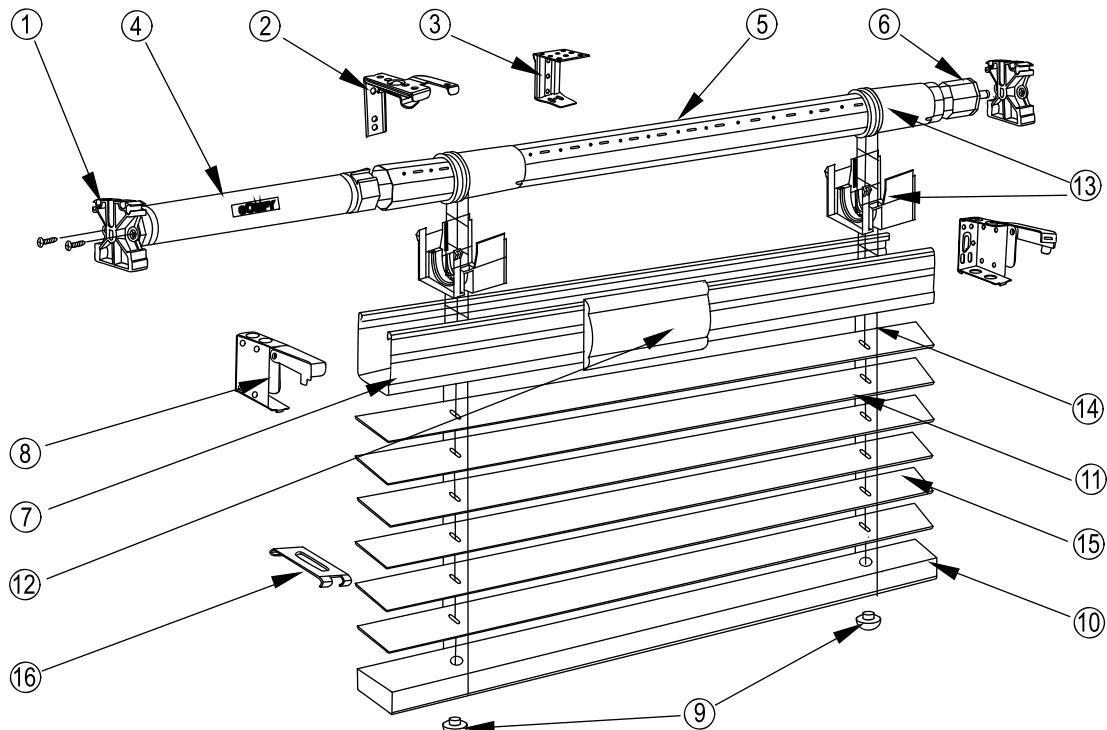

1		8151	
2		8116	
3		8117	
4	MARS LS-40 ALTUS MARS	8152 8160	
5		8153	
6		8154	
7		8106	
8		8118	
9	()	8109	


10		8108	
11		8113	
12		8111	
13		8156	
14		8109	
15		8107	
16		8105	
17		8115	

8150

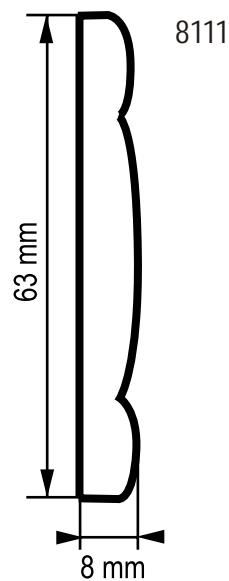
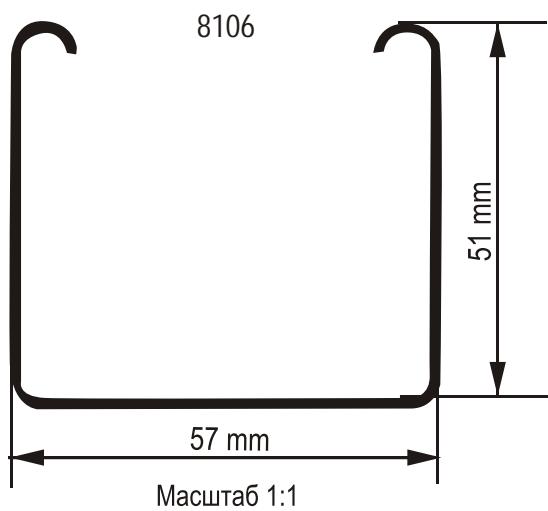


650	.
2400	.
4000	.
7	²

Потолочный монтаж

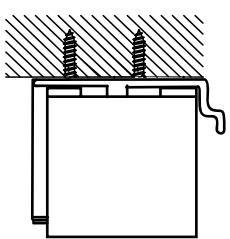


Стеновой монтаж

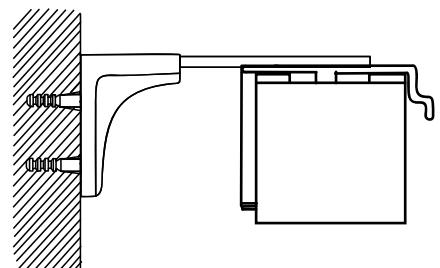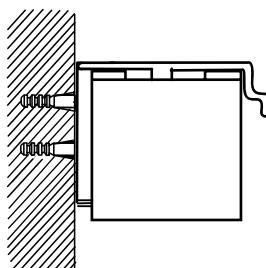



MARS LS-40 ALTUS MARS

	9
,	14
	40
,	230
,	100
,	4
	IP 44

MARS

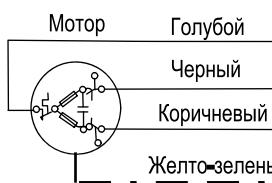


L1 - Фаза
N - Нейтраль
PE - Земля

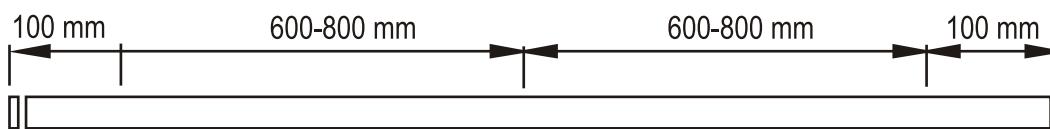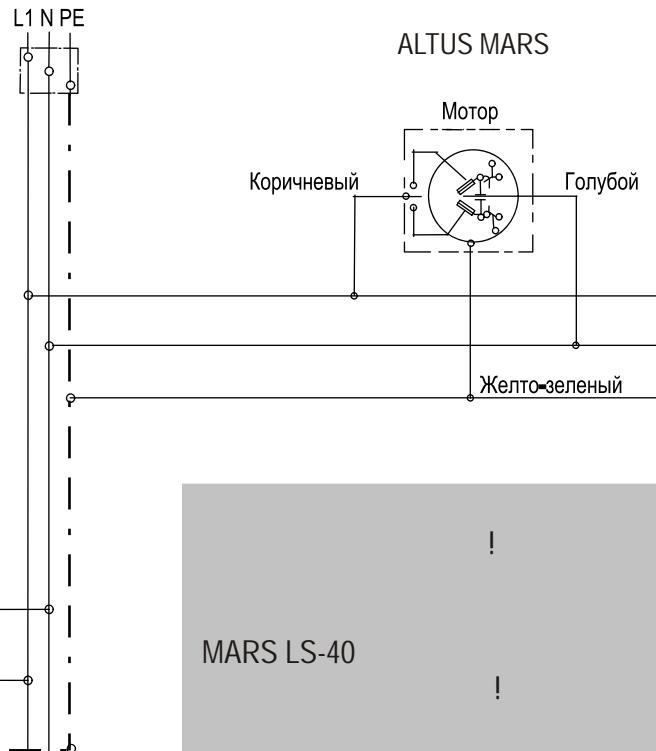



Telis 1RTS
()

Pure	9011
Silver	9012
Lounge	9013
Patio	9014

 


Telis 4RTS
()

Pure	9041
Silver	9042
Lounge	9043
Patio	9044



Telis
Composio
RTS
(
20-
)


Silver	9045
Lounge	9046

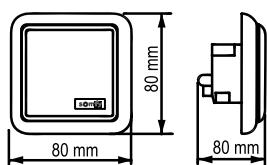

RCE-801


Dry Contact Trasmitter

9016
9001

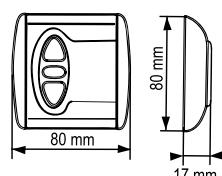

Centralis RTS

9002

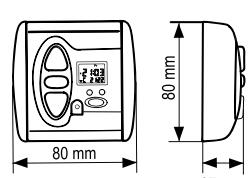


Chronis RTS

9003


Chronic RTS L

9007

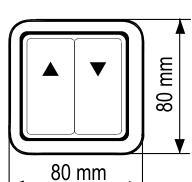


(220)

9015

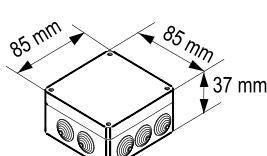

2


9005

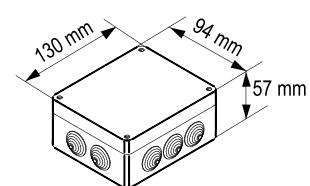


4

9004



Управление кнопкой

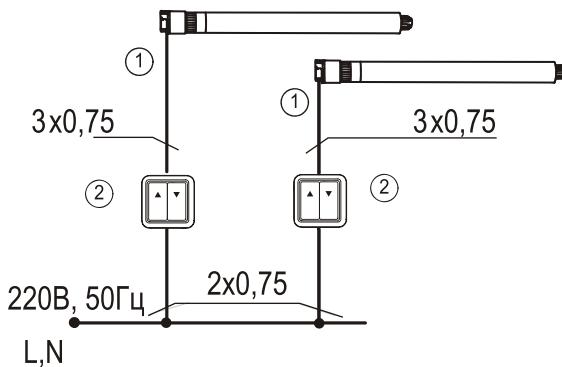

Групповое управление

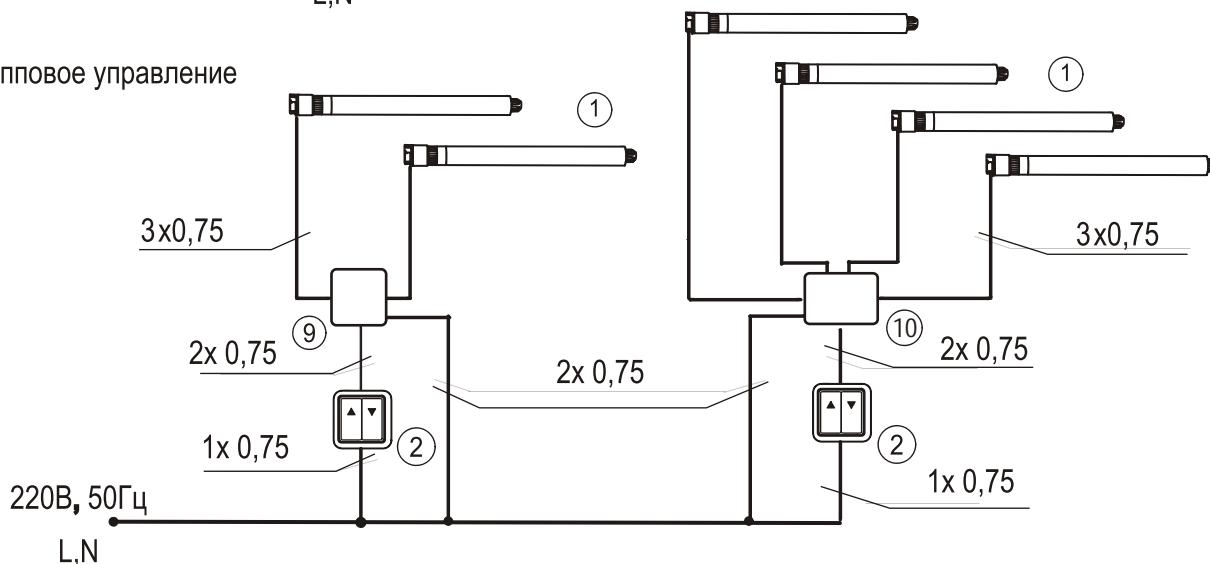

Радиоуправление

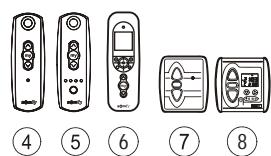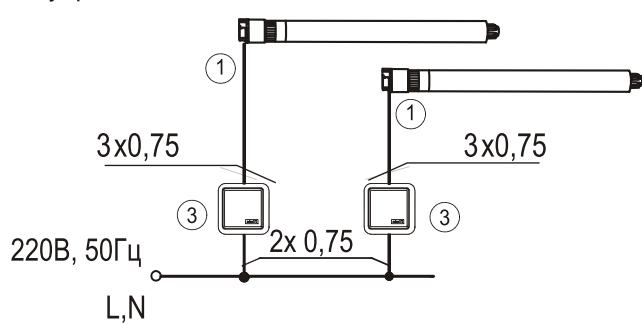

1	MARS	8152
2	(220)	9015
3	RCE 801	9016
4	Telis 1RTS	9011-9014
5	Telis 4RTS	9041-9044
6	Telis Composio RTS	9045-9046
7	Centralis RTS	9002
8	Chronis RTS	9003
9	2	9005
10	4	9004