


5050

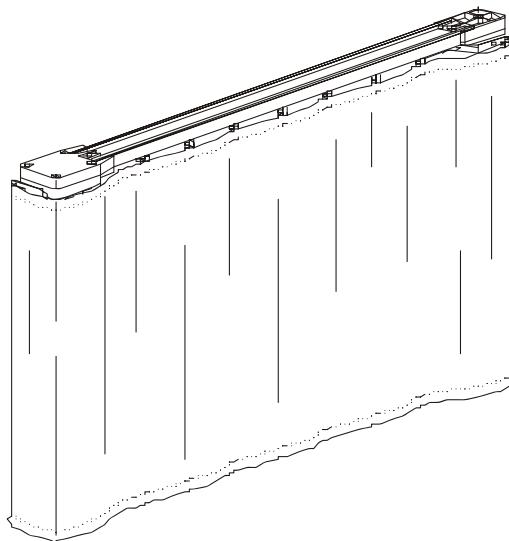


R- 350

7000

50



21000

5050

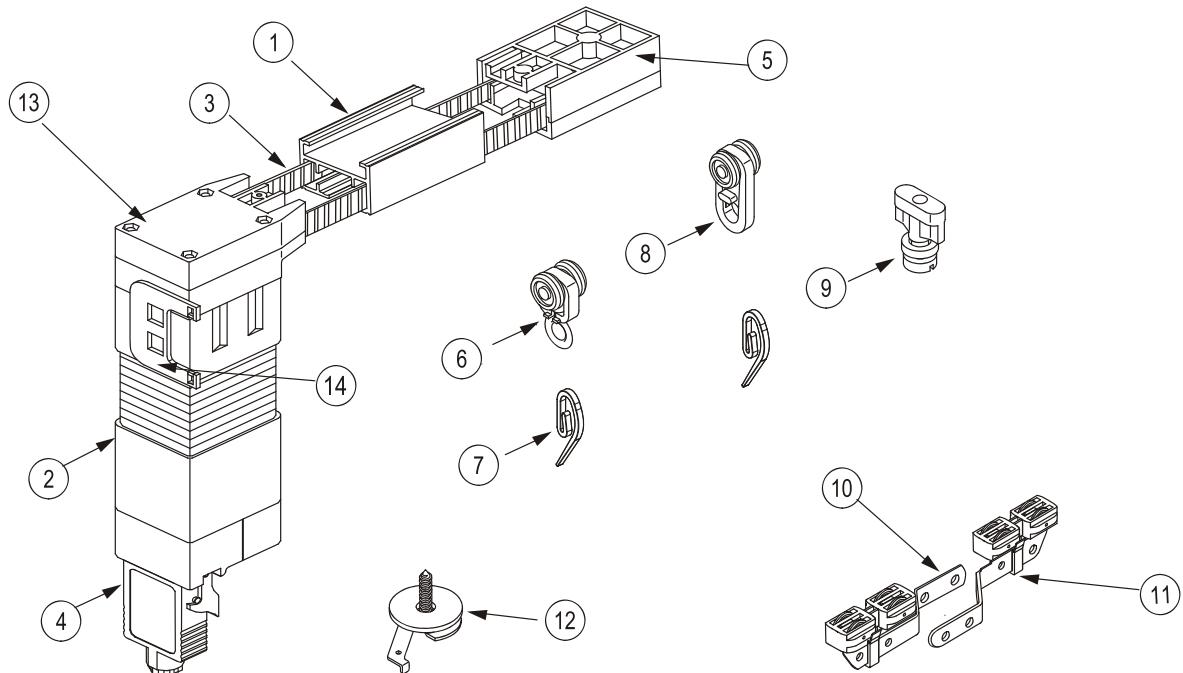


1	5051
2	5054/5055/5056
3	5052
4	5060
5	5053
6	5062
7	1012
8	5063
9	5064
10	5065
11	5066
12	5061
13	5067
14	5068

5050

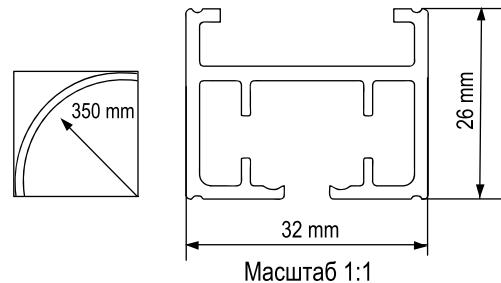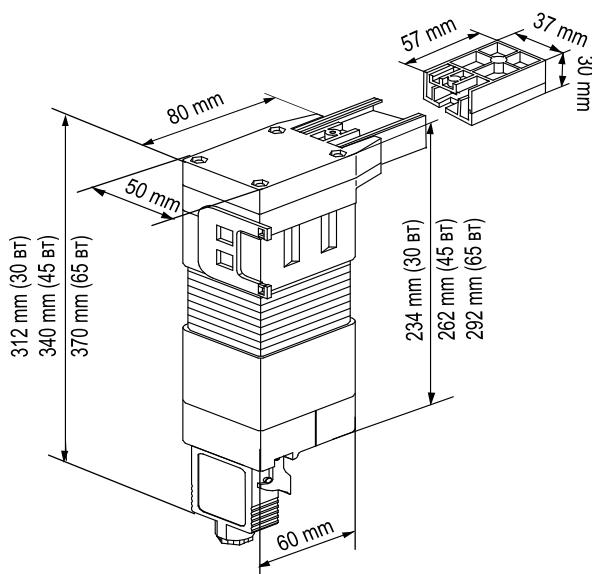


	5054	5055	5056
()	220	220	220
()	50	50	50
()	0,13	0,195	0,28
()	30	45	65




L1 - Фаза
N - Нейтраль
PE - Земля



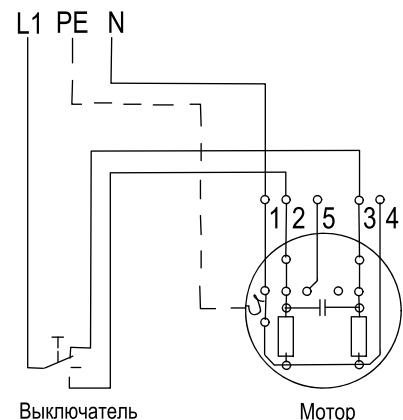



Потолочный монтаж

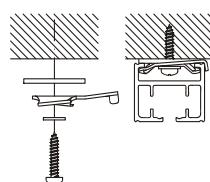


Стеновой монтаж

 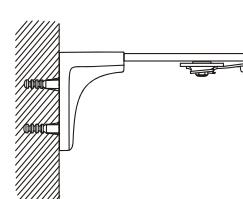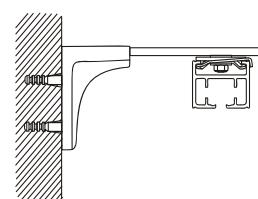

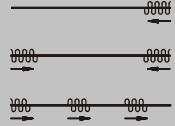  
5054	1-9	1-30	
5055	9-12	30-45	
5056	12-15	30-50	
5054	1-7	1-30	
5055	7-10	30-40	
5056	10-13	30-45	
5055	1-6	1-20	
5055	6-8	20-30	
5056	8-10	20-35	

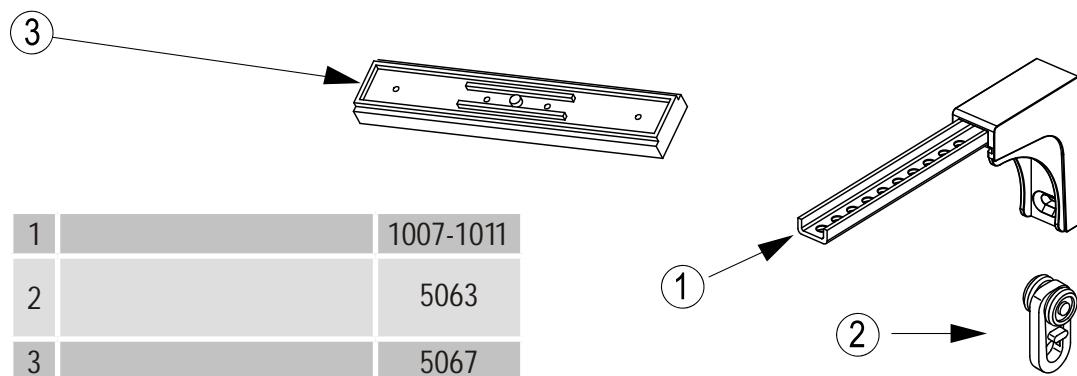

 

Telis 1RTS
()

Pure	9011
Silver	9012
Lounge	9013
Patio	9014

 


Telis 4RTS
()

Pure	9041
Silver	9042
Lounge	9043
Patio	9044



Telis
Composio
RTS
(
20-
)

Silver	9045
Lounge	9046

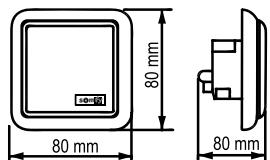


Centralis Indoor RTS

9000


Dry Contact Trasmitter

9001

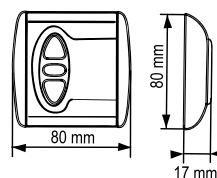

Centralis RTS

9002

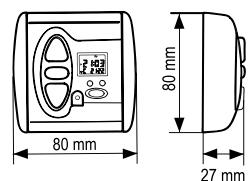


Chronis RTS

9003


Chronic RTS L

9007

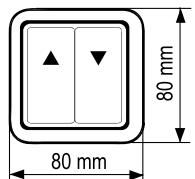


(220)

9015

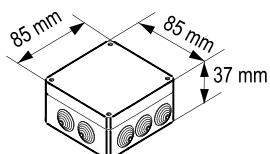

2


9005

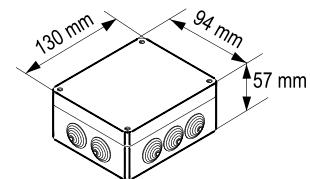


4

9004


Управление кнопкой

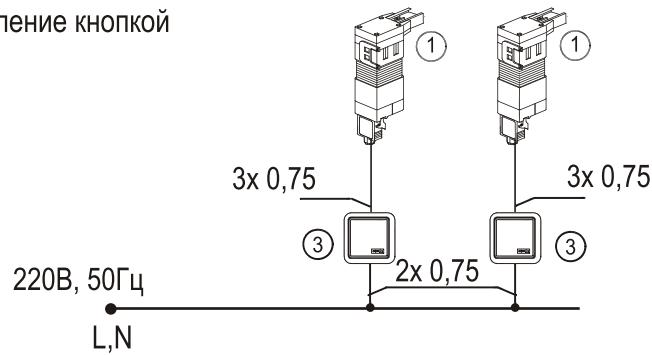

Групповое управление

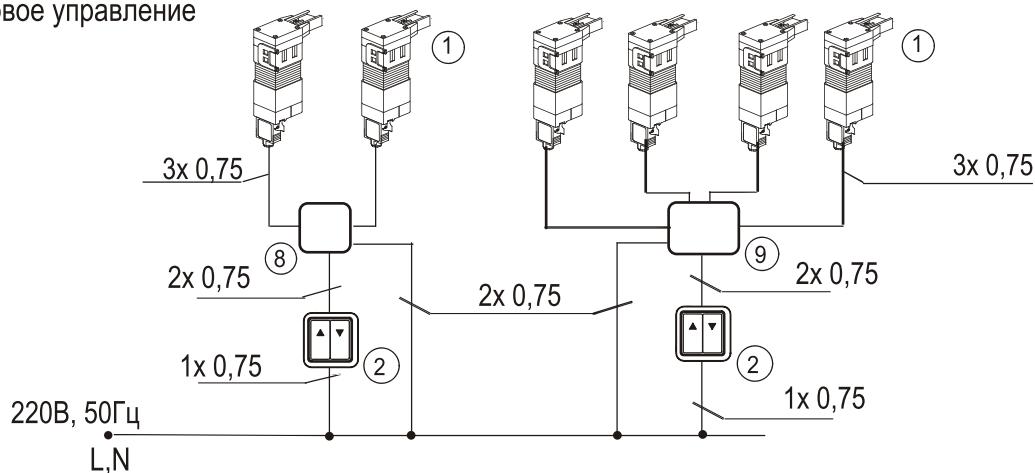

Радиоуправление

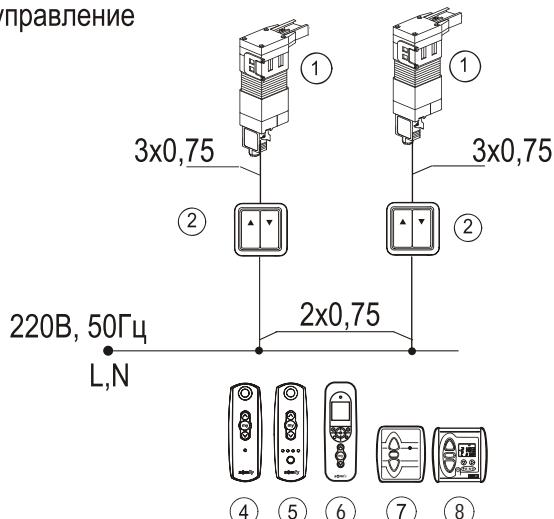

1	30 , 45 , 65	5054-5056
2	220	9015
3	Centralis Indoor RTS	9000
4	Telis 1RTS	9011-9014
5	Telis 4RTS	9041-9044
6	Telis Composio RTS	9045-9046
7	Centralis RTS	9002
8	Chronis RTS	9003
9	4	9004