



3500

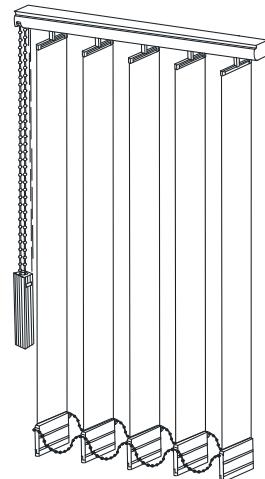

-
-
- 89 .. 127
-
-
-
-
- 6 ..

3500

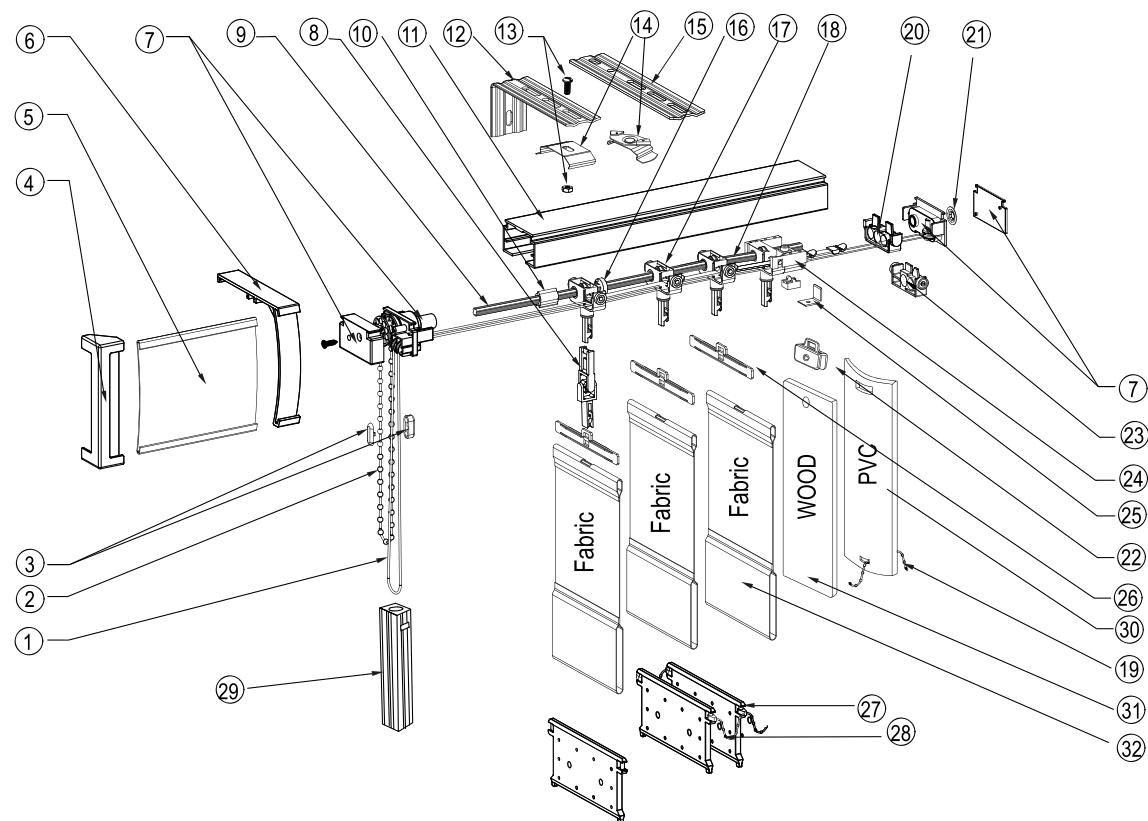


1		3501	
2	:	2011	
		2012	
3		2006	
4		3502	
5		3537	
6		3504	
7		3505	
8		3533	
9		3506	

10		3507	
11		3508	
12	7,5 /10	:	3509/3510
13	-		3511
14			3512
			3513
15		10	3514
16	-		3515
17		: 89 127	3516 3517


18		3518	
19		3519	
20		3520	
21		3521	
22		3522	
23		3523	
24		3524	
25		3525	

26	:	89	.	3526	
		127	.	3527	
27	:	89	.	3528	
		127	.	3529	
28	:	89	.	3530	
		127	.	3531	
29				3532	
30	-			3534	
31	-			3535	
32	-			3536	


3500

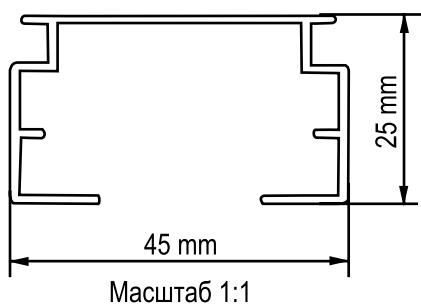


К механизму: ламели и механизм с одной стороны

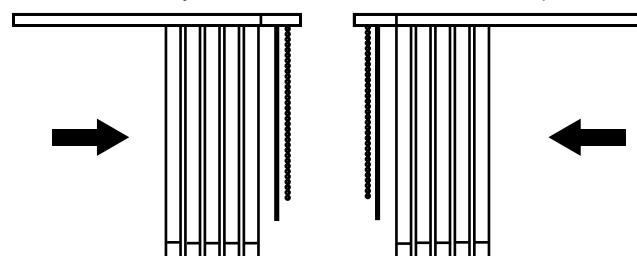


Центральная

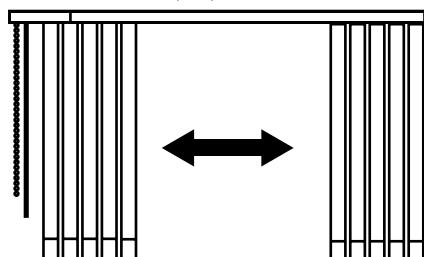



От механизма: ламели и механизм с разных сторон

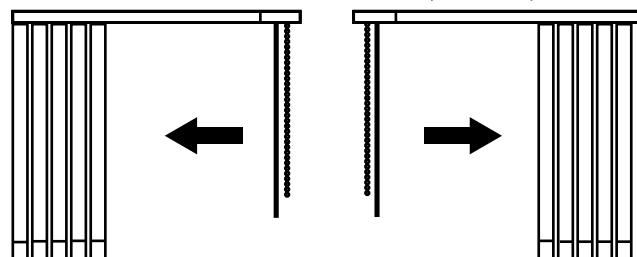



Стеновой монтаж

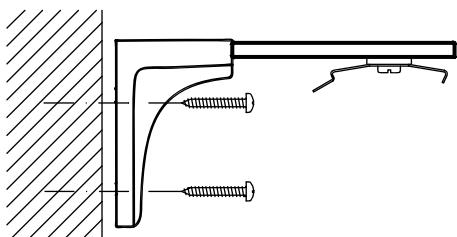

Потолочный монтаж

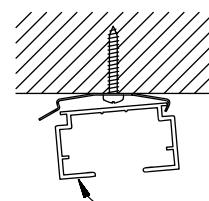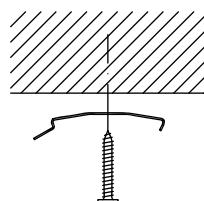

Крепление АРМСТРОНГ

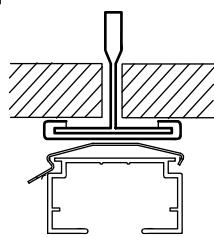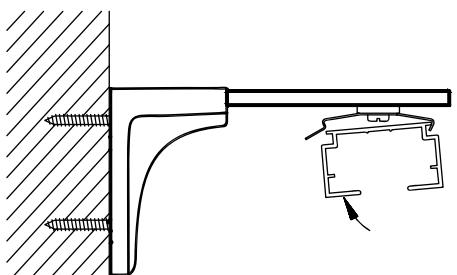

2	:	2012
4		3502
5		3537
6		3504
8		3533
12	:7,5 ./10 .	3509/3510
13	-	3511
14	:	3513
15	10 .	3514
17	: 127	3517
18		3518
19	.	3519
22		3522
26	: 127 .	3527
27	: 127 .	3529
28	: 27 .	3531